

ACURA BSC Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | BSC |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

BSC Function List

Power Window Reset For Driver Side

Power Window Reset For Passenger Side

Power Window Reset For Left Rear

Power Window Reset For Right Rear

Power Window Reset For Driver Side

Power Window Reset For Passenger Side

Power Window Reset For Left Rear

Power Window Reset For Right Rear

Auto Multi Camera Aiming

Aiming Data Transfer

Set To Default

Customize information

Customize Set

Set Maintenance Mode

Reset Maintenance Mode

Display Replace Date

| |
|-----------------------------------|
| Write Replace Date |
| Change Mode |
| Display Contract Data |
| Activation |
| Deactivation |
| Left Side Radar |
| Right Side Radar |
| High Beam Support System Function |
| Reset Operation |
| Returning Operation |
| Automatic Returning Distance |
| Manual Returning Time |
| Reset To Default |
| Rear Camera Aiming |
| Aiming Data Transfer |
| Auto Multi Camera Aiming |
| Aiming Data Transfer |
| Sensor Initial Position Learning |
| Stored DTC Memory Clear |
| XM Radio Channel Adjustment |
| Left BSI Radar Operation Check |
| Right BSI Radar Operation Check |
| Add Remote |
| Erase Remote |

ACURA Diagnostic Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | | System | | |
|--|------------|-------------|----------|--------|----------------|
| ACURA | CDX | | ● | | |
| ACURA | CSX | | ● | | |
| ACURA | EL | | ● | | |
| ACURA | ILX | | ● | | |
| ACURA | MDX | | ● | | |
| ACURA | RDX | | ● | | |
| ACURA | RLX | | ● | | |
| ACURA | RSX | | ● | | |
| ACURA | TL | | ● | | |
| ACURA | TLX | | ● | | |
| ACURA | TSX | | ● | | |
| ACURA | TSX V6 | | ● | | |
| ACURA | ZDX | | ● | | |
| ACURA | 1.7EL | | ● | | |
| System Name | Read Codes | Erase Codes | LiveData | Freeze | Actuation Test |
| Engine (Diesel/PGM FI - Programmed Fuel Injection) | ● | ● | ● | ● | ● |
| ACM (Active Control Engine Mount System) | ● | ● | ● | ● | ● |
| EVPS (Electric Vacuum Pump System) | ● | ● | ● | ● | ● |
| AT (Automatic Transmission) | ● | ● | ● | ● | ● |
| AT (Automatic Transmission) (PARKING) | ○ | ○ | ● | ○ | ○ |
| AT (Automatic Transmission) (I-Shift) | ● | ● | ● | ● | ● |
| ABS (Anti-Lock Braking System) | ● | ● | ● | ● | ● |
| ESB (Electric Servo Brake System) | ● | ● | ● | ● | ● |
| SRS (Supplemental Inflatable Restraint System) | ● | ● | ● | ○ | ● |
| E-Tensioner (Left) | ● | ● | ● | ○ | ○ |
| E-Tensioner (Right) | ● | ● | ● | ○ | ○ |
| Gauge | ● | ● | ● | ○ | ● |
| GW (CAN Gateway) | ● | ● | ○ | ○ | ● |
| AVAS (Acoustic Vehicle Alerting System) | ● | ● | ● | ○ | ● |
| ADS (Active Damper System) | ● | ● | ● | ● | ● |
| EPB (Electric Parking Brake) | ● | ● | ● | ● | ● |
| EPS (Electric Power Steering) | ● | ● | ● | ● | ● |
| E-DPS (Real Time AWD/AWD With Intelligent Control) | ● | ● | ● | ● | ● |

| | | | | | |
|--|---|---|---|---|---|
| SHAWD (Super Handling All Wheel Driving) | ● | ● | ● | ● | ● |
| PAWS (Precision All Wheel Steer) | ● | ● | ● | ● | ● |
| TPMS (Tire Pressure Monitoring System) | ● | ● | ● | ○ | ● |
| ACC (Adaptive Cruise Control) | ● | ● | ● | ● | ● |
| MVCS (Multiple-View Camera System) | ● | ● | ○ | ○ | ○ |
| CBAS (City-Brake Active System) | ● | ● | ● | ○ | ○ |
| FCW (Forward Collision Warning) / LDW (Lane Departure Warning) | ● | ● | ● | ○ | ● |
| PSR (Parking Sensor) | ● | ● | ● | ○ | ○ |
| HUD (Head Up Display) | ● | ● | ● | ○ | ○ |
| ISC (Intake Sound Creator) | ● | ● | ● | ○ | ○ |
| EDLC (Electric Double-Layer Capacitor) | ● | ● | ● | ○ | ● |
| EP_GENMOT (Electric Powertrain) (Generator Motor Control Module) | ● | ● | ● | ● | ● |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | ● | ● | ● | ● | ● |
| EP_IMA (Electric Powertrain) (Integrated Motor Assist) | ● | ● | ● | ● | ● |
| EP_MG (Electric Powertrain) (Management ECU) | ● | ● | ● | ● | ● |
| EP_TMU_L (Electric Powertrain) (Twin Motor Unit - Left) | ● | ● | ● | ○ | ● |
| EP_TMU_R (Electric Powertrain) (Twin Motor Unit - Right) | ● | ● | ● | ○ | ● |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | ● | ● | ● | ● | ● |
| FC (Fuel Cell) | ● | ● | ● | ● | ● |
| FC_CHG (Fuel Cell) (Charge) | ● | ● | ● | ○ | ● |
| FC_HSOU (Fuel Cell) (H2 Shut-Off Unit) | ● | ● | ● | ○ | ● |
| HSP (Honda Smart Parking) | ● | ● | ● | ● | ● |
| CMBS (Collision Mitigation Brake System) | ● | ● | ● | ● | ● |
| 4WS (Four Wheel Steering) | ● | ● | ● | ● | ○ |
| VTM-4 (Variable Torque Management 4WD) | ● | ● | ● | ● | ● |
| ATTS (Active Torque Transfer System) | ● | ● | ● | ○ | ● |
| SWS (Seat Weight Sensor) | ● | ● | ● | ○ | ○ |
| PCU (Power Control Unit) | ● | ● | ● | ○ | ● |
| PCS (Power Control System) | ● | ● | ○ | ○ | ● |
| HSKS (Honda Smart Key System) | ● | ● | ● | ○ | ● |
| DBW (Drive By Wire) | ● | ● | ● | ● | ● |
| NV (Night Vision) | ● | ● | ● | ○ | ● |
| PUH (Pop Up Hood) | ● | ● | ● | ○ | ● |
| HB (Hydraulic Booster) | ● | ● | ● | ○ | ● |
| LKAS Camera ECU | ● | ● | ● | ● | ● |
| LKAS Control ECU | ● | ● | ● | ● | ○ |
| BCM (Body Electrical System) | ● | ● | ● | ○ | ● |
| SVT (Variable Valve Timing) | ● | ● | ● | ○ | ● |

| System Name | Actuation Name |
|---|---|
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 12v Battery Fan Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 2 Stage Turbo Charger Boost Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 2nd ECU (CNG) Compulsion Drive Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 3 Cylinder Activation Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 4 Cylinder Activation Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | 6 Cylinder Activation Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | A/C Clutch |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | A/C Clutch On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | A/C Clutch Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | ABV Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | ACG On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | ACM(Active Control Engine Mount System) |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | All Injectors Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Compression Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Cruise Control Cancel History |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Cylinder AF Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Cylinder Cranking Speed Variation Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | DI Fuel Pressure Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | ECM/PCM Reset |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | EGR Cooler Bypass Valve Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | EGR Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Electric Waste Gate |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Electric Water Pump Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | ETCS(TAC) Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | EVAP Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Flexible Fuel Vehicle Heater Control Unit Test (FFVHCU) |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Heater On/ Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Heater On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Pressure Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Pump Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Pump On |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Rail Pressure Control Valve Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Fuel Rail Pressure Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Glow On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | High Pressure EGR Actuator Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | IACV Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Idle Speed Adjust |

| | |
|---|--|
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Idle Start Stop Couer Check |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | IMRC Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | IMT(IMRC) Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | In Tank Pump Activation |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Injector Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Intake Pressure Control Valve Actuator Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Intake Shutter Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Low Pressure EGR Actuator Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Low Pressure EGR Differential Pressure Sensor Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Low Pressure EGR System Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | O2S Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | One Injector Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Radiator Fan |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Radiator Fan Relay Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Shutter Grill Relay Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Shutter Grill Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Starter Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Subfuel Solenoid Valve Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | TC Boost Control SOL.V.Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | TC Bypass Control SOL.V.Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | TC Wastegate Control SOL.V.Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | TMU Electric Oil Pump Pressure Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | TMU Electric Oil Pump Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Turbo Charger Boost Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | Variable Capacity Engine Oil Pump Solenoid Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTC Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC Low V/T Check |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC Solenoid A On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC Solenoid B On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC Solenoid Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC(VCM) Solenoid A On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC(VCM) Solenoid B On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC(VCM) Solenoid C On/Off |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | VTEC(VCM) Test |
| Engine(Diesel/PGM FI - Programmed Fuel Injection) | WGS Test |
| ACM(Active Control Engine Mount System) | Front ACM Solenoid |
| ACM(Active Control Engine Mount System) | Rear ACM Solenoid |

| | |
|---|---|
| ACM(Active Control Engine Mount System) | Front And Rear ACM Solenoids |
| ACC(Adaptive Cruise Control) | ACC Brake |
| ACC(Adaptive Cruise Control) | ACC Relay |
| ACC(Adaptive Cruise Control) | Alarm Buzzer |
| ACC(Adaptive Cruise Control) | Alarm Test |
| ACC(Adaptive Cruise Control) | Brake Actuator 1 |
| ACC(Adaptive Cruise Control) | Brake Actuator 2 |
| ACC(Adaptive Cruise Control) | Brake Actuator 3 |
| ACC(Adaptive Cruise Control) | Brake Booster 1 |
| ACC(Adaptive Cruise Control) | Brake Booster 2 |
| ACC(Adaptive Cruise Control) | Brake Light |
| ACC(Adaptive Cruise Control) | Buzzer Check |
| ACC(Adaptive Cruise Control) | CMBS Brake |
| ACC(Adaptive Cruise Control) | Indicator Light |
| ACC(Adaptive Cruise Control) | Information Display |
| ACC(Adaptive Cruise Control) | Light Check |
| ACC(Adaptive Cruise Control) | Throttle Opening Angle |
| AT(Automatic Transmission) | ATFP Motor Test |
| AT(Automatic Transmission) | CAS Solenoid A (LF) |
| AT(Automatic Transmission) | CAS Solenoid B (RF) |
| AT(Automatic Transmission) | Clutch Pressure Control (Linear) Solenoid Valve A |
| AT(Automatic Transmission) | Clutch Pressure Control (Linear) Solenoid Valve B |
| AT(Automatic Transmission) | Clutch Pressure Control (Linear) Solenoid Valve C |
| AT(Automatic Transmission) | Clutch Pressure Control (Linear) Solenoid Valve D |
| AT(Automatic Transmission) | Clutch Pressure Control Solenoid Valve A |
| AT(Automatic Transmission) | Clutch Pressure Control Solenoid Valve B |
| AT(Automatic Transmission) | Clutch Pressure Control Solenoid Valve C |
| AT(Automatic Transmission) | Clutch Pressure Control Solenoid Valve Control |
| AT(Automatic Transmission) | Clutch Pressure Control Solenoid Valve D |
| AT(Automatic Transmission) | CVT Oil Pressure Learning Value Reset |
| AT(Automatic Transmission) | Forcedly Change Shift Function |
| AT(Automatic Transmission) | Hydraulic Pressure Test Mode |
| AT(Automatic Transmission) | Inclination Sensor Learn |
| AT(Automatic Transmission) | Indicator Test |
| AT(Automatic Transmission) | Inhibitor Solenoid |
| AT(Automatic Transmission) | Inhibitor Solenoid Test |
| AT(Automatic Transmission) | Line Pressure Solenoid Test |
| AT(Automatic Transmission) | Lockup Solenoid |

| | |
|-------------------------------|----------------------------------|
| AT(Automatic Transmission) | Oil Pump Activation |
| AT(Automatic Transmission) | Pressure Test Assistance Mode |
| AT(Automatic Transmission) | Shift Lock Solenoid Test |
| AT(Automatic Transmission) | Shift SOL A |
| AT(Automatic Transmission) | Shift SOL B |
| AT(Automatic Transmission) | Shift SOL C |
| AT(Automatic Transmission) | Shift SOL D |
| AT(Automatic Transmission) | Shift SOL E |
| AT(Automatic Transmission) | Shift SOL O/P |
| AT(Automatic Transmission) | Shift Solenoid Test |
| AT(Automatic Transmission) | Start Clutch Feedback Learn |
| AT(Automatic Transmission) | Start Clutch Status Data Clear |
| AT(Automatic Transmission) | TCU Setup |
| ABS(Anti-Lock Braking System) | Brake Light Relay/TSA Relay Test |
| ABS(Anti-Lock Braking System) | ESS Activation |
| ABS(Anti-Lock Braking System) | Left Front Solenoid |
| ABS(Anti-Lock Braking System) | Left Front VSA |
| ABS(Anti-Lock Braking System) | Left Rear Solenoid |
| ABS(Anti-Lock Braking System) | Left Rear VSA |
| ABS(Anti-Lock Braking System) | LF Apply/Dump Solenoid |
| ABS(Anti-Lock Braking System) | LF CAS SOL |
| ABS(Anti-Lock Braking System) | LF Pulser |
| ABS(Anti-Lock Braking System) | LF TCS Solenoid |
| ABS(Anti-Lock Braking System) | LR CAS SOL |
| ABS(Anti-Lock Braking System) | LR Pulser |
| ABS(Anti-Lock Braking System) | Modulator Bleed |
| ABS(Anti-Lock Braking System) | RF Apply/Dump Solenoid |
| ABS(Anti-Lock Braking System) | RF CAS SOL |
| ABS(Anti-Lock Braking System) | RF Pulser |
| ABS(Anti-Lock Braking System) | RF TCS Solenoid |
| ABS(Anti-Lock Braking System) | Right Front Solenoid |
| ABS(Anti-Lock Braking System) | Right Front VSA |
| ABS(Anti-Lock Braking System) | Right Rear Solenoid |
| ABS(Anti-Lock Braking System) | Right Rear VSA |
| ABS(Anti-Lock Braking System) | RR CAS SOL |
| ABS(Anti-Lock Braking System) | RR Pulser |
| ABS(Anti-Lock Braking System) | TSA Relay Switch Test |
| ABS(Anti-Lock Braking System) | VSA-TCS Control Valve |

| | |
|---|---|
| ESB(Electric Servo Brake System) | Forced Non Assist Mode |
| ESB(Electric Servo Brake System) | Brake Light Relay Test |
| SRS(Supplemental Inflatable Restraint System) | ACC Brake |
| SRS(Supplemental Inflatable Restraint System) | CMBS Brake |
| SRS(Supplemental Inflatable Restraint System) | Brake Light |
| SRS(Supplemental Inflatable Restraint System) | Indicator Light |
| SRS(Supplemental Inflatable Restraint System) | Information Display |
| SRS(Supplemental Inflatable Restraint System) | Alarm Test |
| Gauge | Self-Diagnostic Function |
| TPMS(Tire Pressure Monitoring System) | Initiator Operation Check |
| TPMS(Tire Pressure Monitoring System) | TPMS Warning Light |
| TPMS(Tire Pressure Monitoring System) | Tire Air Low Indicator |
| TPMS(Tire Pressure Monitoring System) | LR Tire Air Low Indicator |
| TPMS(Tire Pressure Monitoring System) | RR Tire Air Low Indicator |
| TPMS(Tire Pressure Monitoring System) | LF Tire Air Low Indicator |
| TPMS(Tire Pressure Monitoring System) | RF Tire Air Low Indicator |
| TPMS(Tire Pressure Monitoring System) | Sensor Position Check |
| ADS(Active Damper System) | Damper Force Operation Test |
| ATTS(Active Torque Transfer System) | ATTS Test Short Time Mode |
| AT(Automatic Transmission) (I-Shift) | Engage Gear |
| AT(Automatic Transmission) (I-Shift) | Clutch Actuator Full Stroke Operation Test |
| AT(Automatic Transmission) (I-Shift) | Gear Box Self Test |
| AVAS(Acoustic Vehicle Alerting System) | ACC Brake |
| AVAS(Acoustic Vehicle Alerting System) | CMBS Brake |
| AVAS(Acoustic Vehicle Alerting System) | Brake Light |
| AVAS(Acoustic Vehicle Alerting System) | Indicator Light |
| AVAS(Acoustic Vehicle Alerting System) | Information Display |
| AVAS(Acoustic Vehicle Alerting System) | Alarm Test |
| CMBS(Collision Mitigation Brake System) | CMBS Brake |
| DBW(Drive By Wire) | Throttle Test |
| EDLC(Electric Double-Layer Capacitor) | EDLC Module Discharge And Charge Test |
| EDLC(Electric Double-Layer Capacitor) | EDLC Module Usage History Clear |
| EDLC(Electric Double-Layer Capacitor) | EDLC Module Discharge For Removal Or Disposal |
| E-DPS(Real Time AWD/AWD With Intelligent Control) | Solenoid Test |
| EP_IMA(Electric Powertrain) (Integrated Motor Assist) | BM Fan Drive |
| EP_IMA(Electric Powertrain) (Integrated Motor Assist) | MPIM Fan Drive |
| EP_IMA(Electric Powertrain) (Integrated Motor Assist) | IPU Fan Drive |
| EPS(Electric Power Steering) | Frequency Change |

| | |
|---|--|
| EPS(Electric Power Steering) | A/C Fan Minimum |
| EPS(Electric Power Steering) | ACC Brake |
| EPS(Electric Power Steering) | CMBS Brake |
| EPS(Electric Power Steering) | Brake Light |
| EPS(Electric Power Steering) | Indicator Light |
| EPS(Electric Power Steering) | Information Display |
| EPS(Electric Power Steering) | Alarm Test |
| EVPS(Electric Vacuum Pump System) | Vacuum Line Condition Check 1 |
| EVPS(Electric Vacuum Pump System) | Vacuum Line Condition Check 2 |
| FC(Fuel Cell) | High-Voltage Battery Charge Mode |
| FC(Fuel Cell) | N2 Purge Mode |
| FC(Fuel Cell) | Stack Discharge Mode |
| FC(Fuel Cell) | Anode Leak Check Mode |
| FC(Fuel Cell) | H2 Line Pressure Relief Mode |
| FC(Fuel Cell) | Tank Vent Mode |
| FC(Fuel Cell) | Ion Filter Operating Time Check/Set Mode |
| FC(Fuel Cell) | Bleeding Drive Train Coolant Mode |
| FC(Fuel Cell) | Stack Cross Leak Check Mode |
| FC(Fuel Cell) | High-Voltage Battery Fan Test Mode |
| FC(Fuel Cell) | H2 Sensor Installation Validation Mode |
| FC(Fuel Cell) | Parking Actuator Check Mode |
| FC(Fuel Cell) | Stack And Tank H2 Sensor Operation Test Mode |
| FC(Fuel Cell) | H2 Sensor Response Check Mode |
| FC(Fuel Cell) | Exhaust H2 Sensor Operation Test Mode |
| FC(Fuel Cell) | Storing/Shipping Mode |
| FCW(Forward Collision Warning) / LDW (Lane Departure Warning) | FCW Drive |
| FCW(Forward Collision Warning) / LDW (Lane Departure Warning) | LDW Drive |
| FCW(Forward Collision Warning) / LDW (Lane Departure Warning) | Indicator Drive |
| HB(Hydraulic Booster) | Accumulating Pressure Test |
| HB(Hydraulic Booster) | Increasing Master Cylinder Pressure |
| HB(Hydraulic Booster) | Regenerative Brake |
| HB(Hydraulic Booster) | Hydraulic Booster CAS |
| HB(Hydraulic Booster) | Buzzer Test |
| HSKS(Honda Smart Key System) | Immobilizer Indicator Driving |
| HSKS(Honda Smart Key System) | Smart Indicator Driving |
| HSKS(Honda Smart Key System) | [No Cardkey] Indication |
| HSKS(Honda Smart Key System) | [Cardkey BATT] Indication |
| HSKS(Honda Smart Key System) | Interior Buzzer Driving |

| | |
|-------------------------------|--|
| HSKS (Honda Smart Key System) | Exterior Buzzer Driving |
| HSKS (Honda Smart Key System) | Key Switch Driving |
| HSKS (Honda Smart Key System) | IMOCNT Driving |
| HSKS (Honda Smart Key System) | IGNCONT Driving |
| HSKS (Honda Smart Key System) | S-Net Line Driving |
| HSKS (Honda Smart Key System) | IGNTRX Line Driving |
| HSKS (Honda Smart Key System) | RF1 RXVCC Driving |
| HSKS (Honda Smart Key System) | RF2 RXVCC Driving |
| HSKS (Honda Smart Key System) | RF1 TXVCC Driving |
| HSKS (Honda Smart Key System) | RF2 TXVCC Driving |
| HSKS (Honda Smart Key System) | Driver (Door) Antenna Driving |
| HSKS (Honda Smart Key System) | Front Passenger (Door) Antenna Driving |
| HSKS (Honda Smart Key System) | Driver Side Rear (Door) Antenna Driving |
| HSKS (Honda Smart Key System) | Passenger Side Rear (Door) Antenna Driving |
| HSKS (Honda Smart Key System) | Driver Side-Glass Antenna Driving |
| HSKS (Honda Smart Key System) | Passenger Side-Glass Antenna Driving |
| HSKS (Honda Smart Key System) | Trunk/Tailgate/Rear Bumper Antenna Driving |
| HSKS (Honda Smart Key System) | Cabin Front Antenna Driving |
| HSKS (Honda Smart Key System) | Cabin Middle Antenna Driving |
| HSKS (Honda Smart Key System) | Cabin Rear Antenna Driving |
| HSKS (Honda Smart Key System) | Cabin Rear Tray Antenna Driving |
| HSKS (Honda Smart Key System) | Trunk/Rear Shelf Antenna Driving |
| HSKS (Honda Smart Key System) | Driver (Door) Antenna L DC Output |
| HSKS (Honda Smart Key System) | Front Passenger (Door) Antenna L DC Output |
| HSKS (Honda Smart Key System) | Driver Side Rear (Door) Antenna L DC Output |
| HSKS (Honda Smart Key System) | Passenger Side Rear (Door) Antenna L DC Output |
| HSKS (Honda Smart Key System) | Driver Side-Glass Antenna L DC Output |
| HSKS (Honda Smart Key System) | Passenger Side-Glass Antenna L DC Output |
| HSKS (Honda Smart Key System) | Trunk/Tailgate/Rear Bumper Antenna L DC Output |
| HSKS (Honda Smart Key System) | Cabin Front Antenna L DC Output |
| HSKS (Honda Smart Key System) | Cabin Middle Antenna L DC Output |
| HSKS (Honda Smart Key System) | Cabin Rear Antenna L DC Output |
| HSKS (Honda Smart Key System) | Cabin Rear Tray Antenna L DC Output |
| HSKS (Honda Smart Key System) | Trunk/Rear Shelf Antenna L DC Output |
| HSKS (Honda Smart Key System) | RF1 TXD DC Output |
| HSKS (Honda Smart Key System) | RF2 TXD DC Output |
| HSKS (Honda Smart Key System) | [Do Not Have Key] Indication |
| HSKS (Honda Smart Key System) | Exterior Buzzer Driving (Short Time) |

| | |
|--|--|
| HSKS(Honda Smart Key System) | Door Lock Driving |
| HSKS(Honda Smart Key System) | Door Unlock Driving |
| HSKS(Honda Smart Key System) | Auto Lock Cancel Switch Indicator Driving |
| HSKS(Honda Smart Key System) | Cardkey - Customize Link To Driver 1 Driving |
| HSKS(Honda Smart Key System) | Cardkey - Customize Link To Driver 2 Driving |
| HSKS(Honda Smart Key System) | Cardkey SLOT Antenna Driving |
| HSKS(Honda Smart Key System) | Cardkey SLOT Antenna DC Output |
| HSP(Honda Smart Parking) | Reset PA Unit |
| HSP(Honda Smart Parking) | Voice Guide Output Test |
| LKAS Camera ECU | Static Camera Aiming |
| LKAS Camera ECU | Dynamic Camera Aiming |
| LKAS Camera ECU | Video Output |
| NV(Night Vision) | Open HUD Mirror |
| NV(Night Vision) | Display HUD Message |
| NV(Night Vision) | Camera Test |
| NV(Night Vision) | Heater Test |
| PAWS(Precision All Wheel Steer) | Actuator Test |
| PCS(Power Control System) | ESL Power Turn On |
| PCU(Power Control Unit) | Switch Illumination |
| PCU(Power Control Unit) | PCU Key Out |
| PCU(Power Control Unit) | LED Indicator |
| PUH(Pop Up Hood) | Warning Display Force Activation |
| PUH(Pop Up Hood) | Vehicle Level Position Calibration |
| SHAWD(Super Handling All Wheel Driving) | Shift Solenoid Valve Current Testing |
| SHAWD(Super Handling All Wheel Driving) | Shift Solenoid Valve Fuel Pressure Testing |
| SHAWD(Super Handling All Wheel Driving) | Transmission System Test |
| SHAWD(Super Handling All Wheel Driving) | Clutch Characteristics Test |
| SHAWD(Super Handling All Wheel Driving) | Clutch Coil Test |
| SHAWD(Super Handling All Wheel Driving) | Shift Solenoid Test |
| SHAWD(Super Handling All Wheel Driving) | Clutch Test |
| VTM-4(Variable Torque Management 4WD) | Initialization |
| VTM-4(Variable Torque Management 5WD) | Left Clutch Electromagnetic Coil Test |
| VTM-4(Variable Torque Management 6WD) | Right Clutch Electromagnetic Coil Test |
| EP_GENMOT(Electric Powertrain)(Generator Motor Control Module) | Electric Water Pump Test |
| EP_GENMOT(Electric Powertrain)(Generator Motor Control Module) | Charger Forced On Mode |
| EP_HVBAT(Electric Powertrain)(High Voltage Battery Module) | Charger Forced On Mode |
| EP_HVBAT(Electric Powertrain)(High Voltage Battery Module) | Collision Shutoff History Clear |
| EP_HVBAT(Electric Powertrain)(High Voltage Battery Module) | Coolant Air Bleeding |

| | |
|---|-----------------------------------|
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | Electric Water Pump Test |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | IPU A/C Cooling Mode Test |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | IPU Module Fan Drive Test |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | Quick Charge Lid Lock Forced Open |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | Radiator Fan Test |
| EP_HVBAT (Electric Powertrain) (High Voltage Battery Module) | Shift Lock Solenoid Test |
| EP_MG (Electric Powertrain) (Management ECU) | Electric Water Pump Test |
| EP_MG (Electric Powertrain) (Management ECU) | Coolant Air Bleeding |
| EP_MG (Electric Powertrain) (Management ECU) | Radiator Fan Test |
| EP_MG (Electric Powertrain) (Management ECU) | Quick Charge Lid Lock Forced Open |
| EP_MG (Electric Powertrain) (Management ECU) | Shift Lock Solenoid Test |
| EP_MG (Electric Powertrain) (Management ECU) | Collision Shutoff History Clear |
| EP_TMU_L (Electric Powertrain) (Twin Motor Unit - Left) | Electric Water Pump Test |
| EP_TMU_L (Electric Powertrain) (Twin Motor Unit - Left) | IPU A/C Cooling Mode Test |
| EP_TMU_R (Electric Powertrain) (Twin Motor Unit - Right) | Electric Water Pump Test |
| EP_TMU_R (Electric Powertrain) (Twin Motor Unit - Right) | IPU A/C Cooling Mode Test |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Charger Forced On Mode |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Collision Shutoff History Clear |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Coolant Air Bleeding |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Electric Water Pump Test |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | IPU A/C Cooling Mode Test |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | IPU Module Fan Drive Test |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Quick Charge Lid Lock Forced Open |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Radiator Fan Test |
| EP_TRCMOT (Electric Powertrain) (Traction Motor Control Module) | Shift Lock Solenoid Test |

ACURA DPF Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | DPF |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

DPF Function List

Reset Calculated PM Value

DPF Differential Pressure Sensor Initial Learn

DPF Regeneration

ACURA EPB Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | EPB |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

EPB Function List

Sensor Calibration

Brake PAD Maintenance Mode

ACURA ETC Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | ETC |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

ETC Function List

ECM/PCM Reset

Throttle Learning

ETCS (TAC) Test

ACURA INJ Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | INJ |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

INJ Function List

IQA Data Status

IQA Write Data

ACURA MIS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | MIS |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

MIS Function List

A/F Sensor 1 Learning Clear

Abnormal Start Check

Adjustment

Auto Multi Camera Aiming

Blinking Side Airbag Indicator Light

Brake Pressure Sensor Cluster

Calibration Data Clear

Camera Aiming

City-Brake Active System Drive

Clutch Clamp Force Characteristic

Clutch Filling Check

Clutch Fluid Air Bleeding

Clutch Fluid Filling

Coolant Air Bleeding

Crank(CKP) Pattern Clear

| |
|--|
| Crank(CKP) Pattern Learning |
| Customize Reset |
| Deflation Warning System |
| Differential Torque |
| Door Unlocked |
| Dynamic Camera Aiming |
| E-DPS Control Module Replacement |
| E-Tensioner For CMBS |
| E-VTC Learning |
| ECO Score Writing |
| ECU Clear |
| EOL Learn Gear |
| EOL Learn Synchronizing In Sequence |
| EOL Reference Search(NTL-REF) |
| EPS Dumping |
| EPS Steering Angle Sensor Value Clear |
| Function Test |
| Gear Ratio Sensor |
| Idle Stop Starter Counter Clear |
| Idle Stop Starter Counter Forced Write |
| IMA Battery Replacement |
| IMA ECU Replacement |
| Initialization |
| Intake Pressure Control Valve Learning Clear |
| ISU Reset |
| ISV Forced Learning |
| LKAS Suspend Beep |
| Longitudinal G Sensor Learning |
| Low Pressure EGR Differential Pressure Sensor Learning Clear |
| Ma-EPS Control |
| MAF Sensor Learning Clear |
| Main Fuel Tank Alcohol Content Write Data |
| Memorizing 0[Zero] Position |
| Motor Rotor Position Calibration(IMA) |

| |
|--|
| Motor Rotor Position Sensor Learning |
| ODS Unit Initialization |
| Oil Dilution Estimate Integrated Value Clear |
| Oil Pump Activation |
| OPDS Initialization |
| Open The Refill Orifice |
| Radar Aiming |
| Radar Correction For Windshield |
| Readiness Codes |
| Replace ECM/PCM |
| Replace ISU |
| Replace TCM/PCM |
| Sensor 0 (Zero) Position Memorization |
| Sensor Cluster |
| Setting Data |
| Shift Clutch Quality Test |
| Shift Motor Calibration |
| SOC Preset |
| SOC Presetting |
| Static Camera Aiming |
| Steering Angle Sensor Center Point Writing |
| Steering Rewrite |
| Stroke Sensor Learning |
| SWS Initialization |
| Teach In |
| TMU Activation |
| Transfer Camera Parameter |
| Transmission Drive Correction |
| Transmission Oil Life Reset |
| Transmission System Correction |
| Twin Motor Unit Motor Rotor Position Sensor Learning |
| VSA Sensor Neutral Position Memorisation |
| Write VIN |
| Yaw Rate/Lateral Acceleration Sensor |

ACURA OIL Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | OIL |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

OIL Function List

Maintenance Information (USA)

Service Minder (Europe)

CVT Fluid Replacement (General)

Maintenance Minder (USA)

Maintenance Minder (Europe)

Lock Release

CVT Fluid Life Reset

PAX Warning Reset (USA Market)

Lift ODO Lock

ACURA SAS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | SAS |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

SAS Function List

All Sensors

Steering Angle Sensor Center Point Writing

Replacement

Steering Angle Sensor

Torque Sensor Learn

EPS Steering Angle Sensor Value Clear

Yaw Rate And Lateral Acceleration Sensors Correction

Steering End Position Learning

Initialization

Neutral Rewriting

Neutral Adjustment

ACURA TPM Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | TPM |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

TPM Function List

Sensor ID Learning

Reprogramming For Accessory Tires

Reprogramming For Standard Tires

ACURA BLD Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | BLD |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

BLD Function List

Air Bleeding

ABS Bleeding

ACURA BMS Function List (Note: For reference only)

NOTES:

● This function is supported.

※ This function may be supported, which depends on the actual condition of the vehicle.

○ This function is not supported.

▲ This function is the new feature in this version.

| Make | Model | BMS |
|-------|--------|-----|
| ACURA | CDX | ※ |
| ACURA | CSX | ※ |
| ACURA | EL | ※ |
| ACURA | ILX | ※ |
| ACURA | MDX | ※ |
| ACURA | RDX | ※ |
| ACURA | RLX | ※ |
| ACURA | RSX | ※ |
| ACURA | TL | ※ |
| ACURA | TLX | ※ |
| ACURA | TSX | ※ |
| ACURA | TSX V6 | ※ |
| ACURA | ZDX | ※ |
| ACURA | 1.7EL | ※ |

BMS Function List

High Voltage Battery/Motor-High Voltage Battery ECU Replacement

HV Battery / HV Battery ECU Replacement